


LUND®

935K-01

Installation Instructions Dually Mud Flap

1. Remove the factory bolt holding the fender brace to the wheel well. Mount the mud flap bracket to the truck box using this bolt through the slot in the top of the bracket, the bracket should angle towards the back of the truck box.
2. Remove the first bolt holding the fender liner to the wheel house. Mount the bent strap to the truck box using this bolt through the end slot in the strap closest to the bend.
3. Bolt the other end of the strap to the bracket with a 5/16" bolt, nut and washers through the diagonal slot in the bracket.
4. Bolt the mud flap at the desired height to the bracket with 5/16" bolt, nuts and washers. Note it is helpful to cut the slots out in the rubber mud flap with a utility knife before bolting to the bracket.
5. Tighten all bolts.

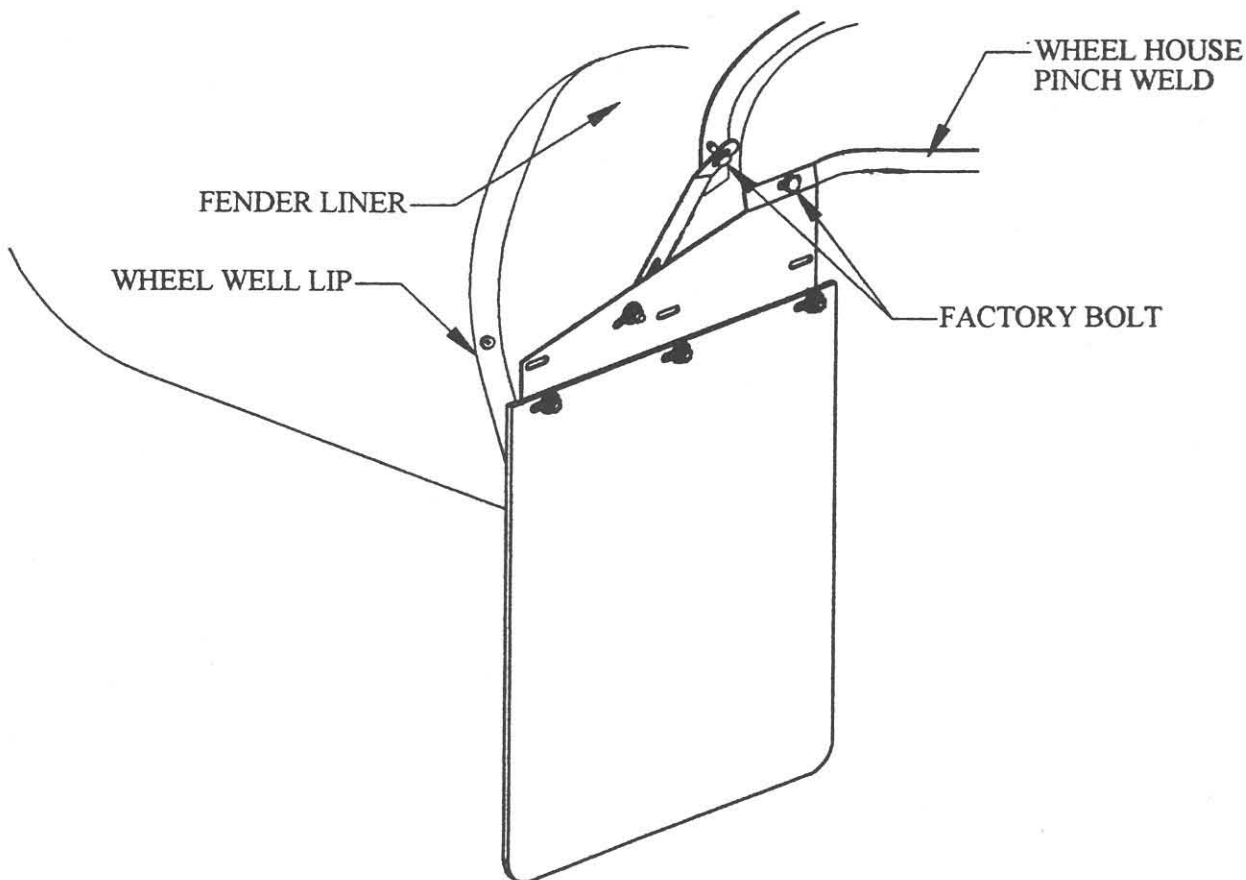

LUND®

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

