




935D-03
EX-935D-03

Installation Instructions Dodge Mud Flap 2003 Dodge Ram Dually.

MUD FLAP INSTALLATION


1. Using 5/16" bolts, lock washers, and nuts attach the M-0672 or m-0673 angle bracket to the m-0674 bracket (this will make a driver side and a passenger side application). Then hold the brackets up to the pinchweld and against the wheel well and mark thru the hole in the M-0672 or M-0673 and the hole in top of the M-0674. Remove the brackets, and drill an 11/32" hole in each marked location.
2. Attach the M-0674 bracket to the mud flap (on the opposite side of the weights) using 5/16 bolts, flat washers, lock washers, and nuts (note: not all of the flat washers will be used). Make sure that the side of the mud flap that has the weights riveted to it is facing towards the rear of the vehicle.
3. Bolt the brackets thru the holes in the pinch weld and the wheel well lip with 5/16" bolts and nuts.

FASTEN THE M-0672 OR M-0673 & M-0674 BRACKETS TOGETHER WITH 5/16 BOLTS, LOCK WASHERS, AND NUTS.

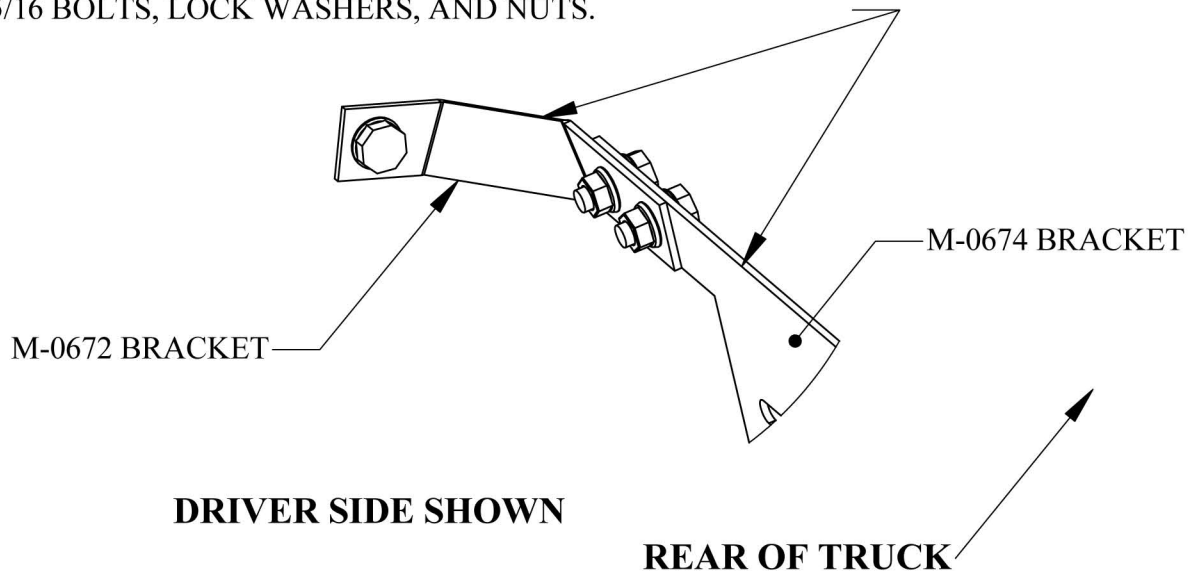

EX & DIAMOND MUD FLAP BOM		
PART #	935D-03	EX-935D-03
M-0672	1	1
M-0673	1	1
M-0674	2	2
A-BOLT	1	1
MUD FLAP DIA	2	
MUD FLAP S/S		2

DRIVER SIDE SHOWN

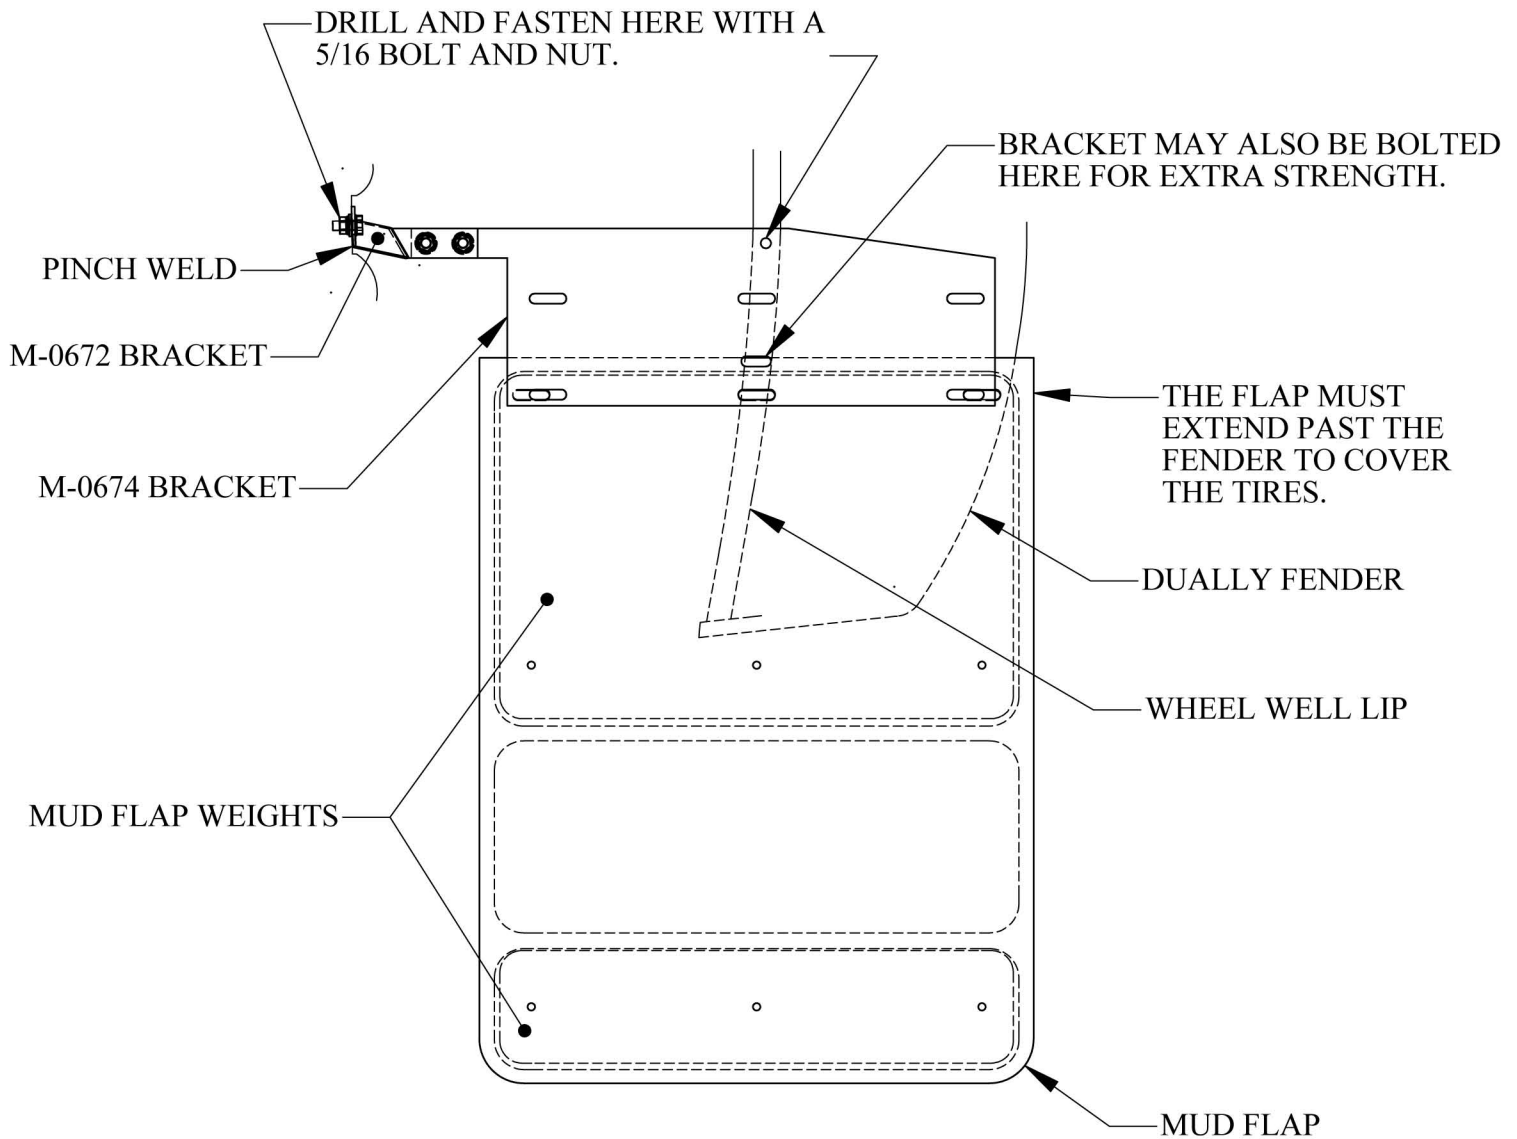

*****MAKE SURE THE THE MUD FLAP***
WEIGHTS ARE FACING THE REAR
OF THE VEHICLE.**

LUND

Lund International

800-241-7219 • Visit us at lundinternational.com

© 2012 Lund International, Inc. All rights reserved.

Lund® and the Lund® logo are trademarks of Lund International, Inc.

