


70°-100° F (Install temp.)




The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 This product is designed to be placed inside the window channel. Buff the inside of window channel with Scotch Brite scuff pad. Then clean the channel with an alcohol pad.
- 2 Remove tape liner from front & rear flanges. Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first.
- 4 Remove remaining tape liner.
- 5 Using a flathead screwdriver install C1 clips at end of visor flanges to compress visor into rubber window channel.
- 6 Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 7 Install the rear visors using the same methods as the front visor, with the exception of the rear end flange.

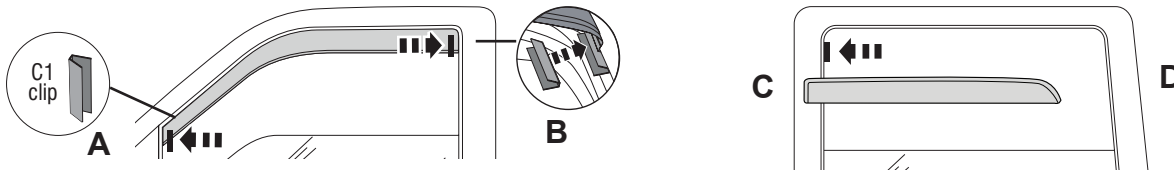

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5364

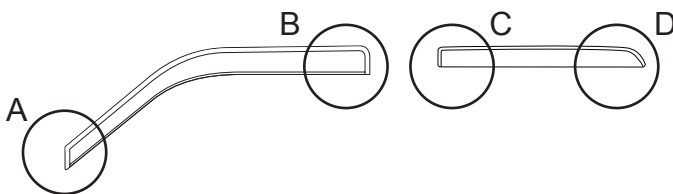


70°-100° F (Install temp.)



The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 This product is designed to be placed inside the window channel. Buff the inside of window channel with Scotch Brite scuff pad. Then clean the channel with an alcohol pad.
- 2 Remove tape liner from front & rear flanges. Peel back 2" of tape liner from each end of top flange.
- 3 Insert visor into window channel, rear flange first.
- 4 Remove remaining tape liner.
- 5 Using a flathead screwdriver install C1 clips at end of visor flanges to compress visor into rubber window channel.
- 6 Raise window slowly and leave up for 24 hours to secure visor to window channel.
- 7 Install the rear visors using the same methods as the front visor, with the exception of the rear end flange.

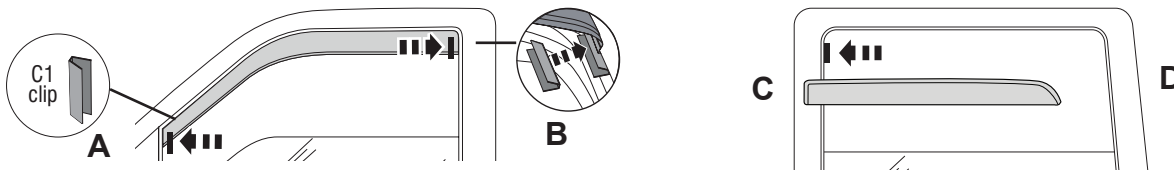

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-858-5364