


70°-100° F (Install temp.)

- 1 **This product is designed to be placed inside the window channel.** Lower the window. Pull out the rubber channel from the top rear corner of the window frame. Insert clip into the sheet metal channel cavity and reinstall the rubber channel while holding the clip in place.
- 2 Clean window channel with alcohol pad then apply surface prep.
- 3 Peel back 2" of tape liner from each end of the visor.
- 4 Install visor into channel. Slide rear flange under clip. Front flange attaches to outside of mirror cap.
- 5 Remove tape liner by pulling on free ends. Raise window and leave up 24 hours to secure.
- 6 If necessary, cut excess tape along window trim with utility knife. Remove trimmed tape by stretching.
- 7 To install rear visors, repeat step 1 to add clip to the top front corner of the window frame.
- 8 Repeat steps 2 & 3, insert visor into channel, slide visor flange under the front rear window clip.

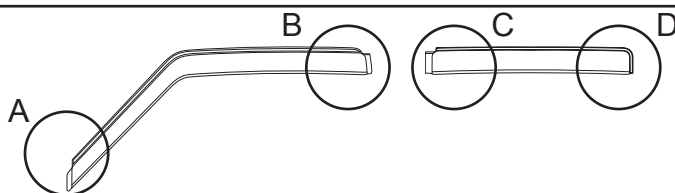

IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219



70°-100° F (Install temp.)

- 1 **This product is designed to be placed inside the window channel.** Lower the window. Pull out the rubber channel from the top rear corner of the window frame. Insert clip into the sheet metal channel cavity and reinstall the rubber channel while holding the clip in place.
- 2 Clean window channel with alcohol pad then apply surface prep.
- 3 Peel back 2" of tape liner from each end of the visor.
- 4 Install visor into channel. Slide rear flange under clip. Front flange attaches to outside of mirror cap.
- 5 Remove tape liner by pulling on free ends. Raise window and leave up 24 hours to secure.
- 6 If necessary, cut excess tape along window trim with utility knife. Remove trimmed tape by stretching.
- 7 To install rear visors, repeat step 1 to add clip to the top front corner of the window frame.
- 8 Repeat steps 2 & 3, insert visor into channel, slide visor flange under the front rear window clip.



IMPORTANT: Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.
Stampede Automotive Products • Visit us at stampedeproducts.com • 800-241-7219