





The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.

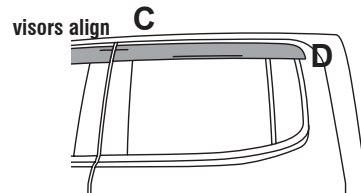

- 1 Clean the painted door frame and the B-pillar with an alcohol pad, and wipe dry with a soft cloth.
- 2 Remove tape liner from rear flange of visor. Peel back 2" (5 cm) of tape liner from each end of the tape flange.
- 3 Align visor to the previously cleaned surface. The tape flange of the visor will attach to the **PAINTED** surface of the door frame **ABOVE** the rubber trim of the window frame and the rear flange will attach to the B-pillar surface.
- 4 Gently press the exposed areas of tape against the surface and verify position.
- 5 With the visor in its final position, remove the remaining tape liner by pulling on free ends.
- 6 Apply strong pressure along all flanges to ensure proper adhesion of tape.
- 7 The rear visor attaches with the same preparation methods as the front visor. Align the front of the visor with the front of the door frame. The front and rear visors should line up at the B-pillar. Repeat **Steps 1-7** for opposite side.

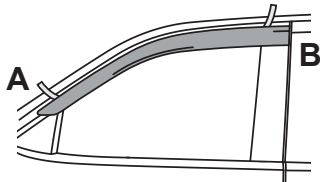



**IMPORTANT:** Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.  
Stampede Automotive Products • Visit us at [stampedeproducts.com](http://stampedeproducts.com) • 800-858-5634

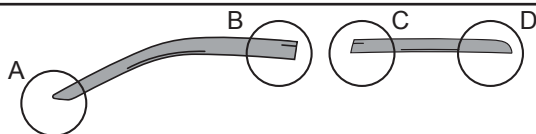

The material that your product is made from can be recycled. Please also consider recycling the packaging that your product came in.



- 1 Clean the painted door frame and the B-pillar with an alcohol pad, and wipe dry with a soft cloth.
- 2 Remove tape liner from rear flange of visor. Peel back 2" (5 cm) of tape liner from each end of the tape flange.
- 3 Align visor to the previously cleaned surface. The tape flange of the visor will attach to the **PAINTED** surface of the door frame **ABOVE** the rubber trim of the window frame and the rear flange will attach to the B-pillar surface.
- 4 Gently press the exposed areas of tape against the surface and verify position.
- 5 With the visor in its final position, remove the remaining tape liner by pulling on free ends.
- 6 Apply strong pressure along all flanges to ensure proper adhesion of tape.
- 7 The rear visor attaches with the same preparation methods as the front visor. Align the front of the visor with the front of the door frame. The front and rear visors should line up at the B-pillar. Repeat **Steps 1-7** for opposite side.

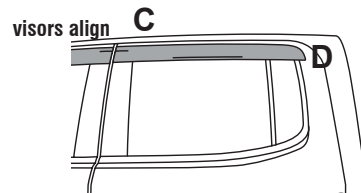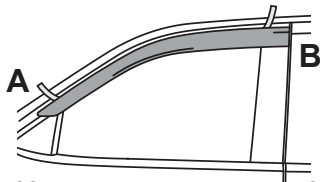

**IMPORTANT:** Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.  
Stampede Automotive Products • Visit us at [stampedeproducts.com](http://stampedeproducts.com) • 800-858-5634