


1. Clean the upper leading edge of the hood surface and top of the plastic nose piece with an alcohol pad.
2. Raise Hood.
3. Expose 2" (5 cm) of tape liner from each end of the center flanges on the hood shield. Ensure that free ends of tape liner are accessible.
4. Position hood shield in place on hood. Align holes in hood shield flanges with holes in hood.
5. Install (1) fastener in each flange. **Do not fully tighten at this time.**
6. Lightly close hood and check that hood shield is centered properly on hood. Adjust as needed. Raise hood and fully tighten both fasteners. After tightening, fully close hood.
7. Check position of hood shield. **NOTE: (1) Ensure that center flange where tape will adhere is still centered, and (2) inspect shield to ensure it is sitting flush on the hood / nose piece.**
8. Press and hold hood shield against the upper surface of hood.
9. Remove remaining tape liner by pulling on the free ends. Apply pressure to flange to ensure proper adhesion of tape.
10. Remove adhesive backing and apply (4) bump ons to hood surface.

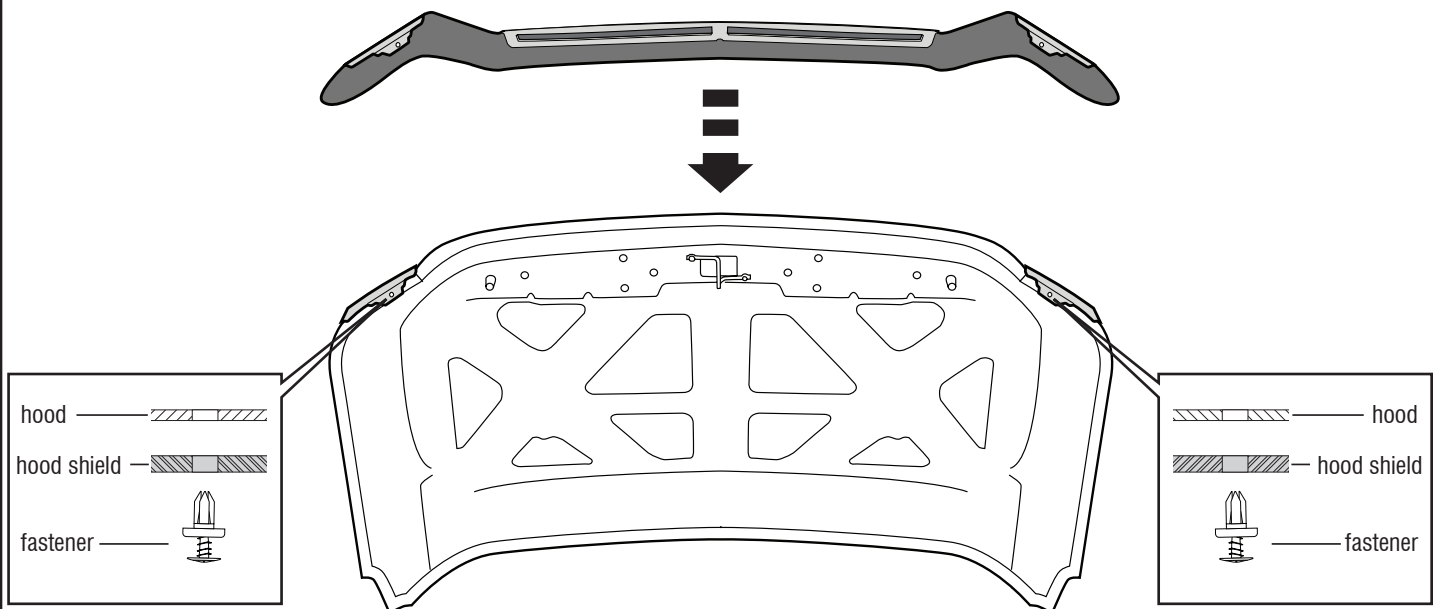

IMPORTANT: Before driving, ensure the hood shield is properly secured to vehicle. Clean with a **SOFT** cloth and soap and water **ONLY!** Using abrasive cleaners, chemicals, or solvents will **VOID** the warranty on this product.